

CHANDLER & PRICE CRAFTSMAN PRESS

with

**C. & P. Rice Automatic
Feeder**

10x15 and 12x18



Component Parts List

When ordering parts:—

Always give the serial number of the unit which is found stamped on the bed of the press in the upper left-hand corner. *RQ 1972*

Always give the size of press, part number, and the name and description of the part wanted.



Always state the definite mode of transportation, whether Air Mail—Express—Parcel Post—Freight.

When ordering by wire, use Code words listed in the left-hand column, specifying quantity of each part wanted. The Code word will indicate to us the number and name of the part.

Parts are shipped f.o.b. factory and any prices listed are subject to change without notice.

In practically all cases parts ordered will be shipped from the factory the same day the order is received.

Too much information is always better than not enough. A close observance of the above suggestions will eliminate the possibility of error and will expedite service.

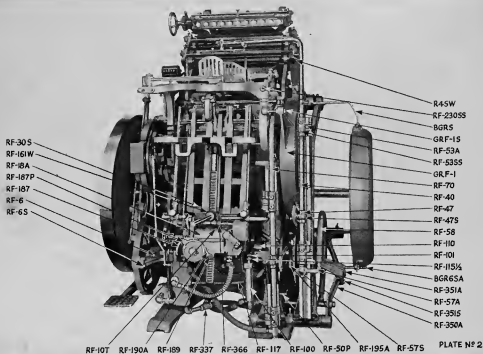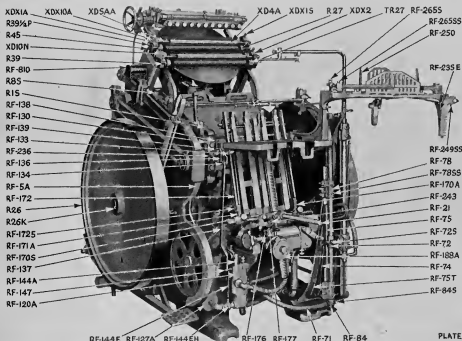

COMPONENT PARTS LIST

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
BOR2	3	OBABU	Belt Guard Rear Support	CF19P	Not Shown	OBICA	Brayer Fountain Vibrating Roller Cam Pin
BOR2N	Not Shown	OBACE	Belt Guard Rear Support Screw Nut	CF19S	Not Shown	OBIDY	Brayer Fountain Vibrating Roller Cam Pin
BOR2S	3	OBADO	Belt Guard Rear Support Screw				Ball Screw
BOR2W	Not Shown	OBAPA	Belt Guard Rear Support Screw Washer	CF20A	Not Shown	OBIGE	Brayer Fountain Brayer Arm Shaft
BOR4	Not Shown	OBAGB	Belt Guard Support Bracket	CF20EA	10	OBIGL	Brayer Fountain Spring
BOR5	2	OBABA	Belt Guard Bracer Rod	CF20EW	Not Shown	OBIIHA	Brayer Fountain Spring Washer
BOR5LN	Not Shown	OBABJ	Belt Guard Bracer Rod Nut	CF20K	Not Shown	OBIIJA	Brayer Fountain Brayer Arm Key
BOR5N	Not Shown	OBABK	Belt Guard Bracer Rod Wing Nut	CF20P	Not Shown	OBIIKY	Brayer Fountain Brayer Arm Taper Pin
BOR5W	Not Shown	OBALM	Belt Guard Bracer Rod Washer	CF21AA	10	OBILD	Brayer Fountain Brayer Arm, Left
BOR6A	Not Shown	OBAMI	Belt Guard Lower Support	CF21B	10	OBIMS	Brayer Fountain Spring Rod
BOR6SA	Not Shown	OBANE	Belt Guard Lower Support Nut	CF21BK	Not Shown	OBINT	Brayer Fountain Spring Rod Cotter
BOR6SN	Not Shown	OBAPY	Belt Guard Lower Support Stud Nut	CF21RS	10	OBIPU	Brayer Fountain Spring Rod Stud
BOR6SW	Not Shown	OBART	Belt Guard Lower Support Stud Nut	CF21RSC	Not Shown	OBIQE	Brayer Fountain Spring Rod Stud Cotter
BOR6W	Not Shown	OBASM	Belt Guard Lower Support Washer	CF21RSW	Not Shown	OBIRM	Brayer Fountain Spring Rod Stud Washer
BOR7	3	OBATU	Belt Guide	CF218S	Not Shown	OBIST	Brayer Fountain Brayer Arm Set Screw
BOR7N	3	OBABV	Belt Guide Nut	CF22AA	10	OBITH	Brayer Fountain Brayer Arm, Right
BOR7W	3	OBABL	Belt Guide Nut Washer	CF22R	10	OBIVE	Brayer Fountain Brayer Arm Safety Handle
BOR10	3	OBAXE	Belt Guide				
BL1	6	OBABO	Brake Lever	CF22S	10	OBIVU	Brayer Fountain Swinging Arm Spring Rod Stud
BL1E	6	OBHAM	Brake Lever Spring				
BL1P	6	OBEBT	Brake Lever Pin	CF23	10	OBIXL	Brayer Fountain Roll Large Gear
BL1PC	Not Shown	OBBSB	Brake Lever Cotter	CF23P	Not Shown	OBIZO	Brayer Fountain Roll Large Gear Pin
BL1	6	OBBOF	Brake Lever Bracket	CF24PC	Not Shown	OBJAW	Brayer Fountain Ratchet Lever
BL2S	Not Shown	OBBOV	Brake Lever Bracket Screw				Brayer Fountain Ratchet Lever Stud
BL2SN	Not Shown	OBBOV	Brake Lever Bracket Screw Nut	CF25	Not Shown	OBJJO	Brayer Fountain Ratchet Pawl Spring Latch
BL2SS	6	OBCEB	Brake Lever Bracket Set Screw	CF27A	Not Shown	OBJOB	Brayer Fountain Composition Roller Gear
BL2SW	Not Shown	OBCEB	Brake Lever Bracket Set Screw Washer	CF27C	Not Shown	OBJUS	Brayer Fountain Composition Roller
BL2SSN	Not Shown	OBCEB	Brake Lever Bracket Set Screw Lock Nut	CF28	Not Shown	OBKAM	Brayer Fountain Composition Roller Saddle, Left
BL3	3	OBCTU	*Brake Shoe	CF28C	Not Shown	OBKIK	Brayer Fountain Composition Roller Saddle Cotter
BL3S	3	OBDDM	Brake Shoe Screw	CF28E	Not Shown	OBKIS	Brayer Fountain Composition Roller Saddle Spring
BL3SN	Not Shown	OBDEF	Brake Shoe Screw Nut	CF28S	Not Shown	OBKOF	Brayer Fountain Composition Roller Saddle Screw
BL4	Not Shown	OBDDN	Brake Shoe Lining Rivet	CF28S	Not Shown	OBKUP	Brayer Fountain Composition Roller Saddle, Right
BL5	6	OBDDP	Brake Shoe Lining	CF29	Not Shown	OBELAS	Brayer Fountain Composition Roller Stock
CF1A	10	OBDDU	Brayer Fountain Side Frame, Left	CF29 Cost	Not Shown	OBLEW	Brayer Fountain Composition Roller Stock Cost
CF1N	Not Shown	OBEBI	Brayer Fountain Front Rod Nut	CF30	Not Shown	OBLLX	Brayer Fountain Bracket Rod, Short
CF1R	Not Shown	OBEBB	Brayer Fountain Front Rod	CF30N	Not Shown	OBLOO	Brayer Fountain Bracket Rod Nut
CF1S	Not Shown	OBEDU	Brayer Fountain Side Frame Swivel Plug, Left	CF31	10	OBLLV	Brayer Fountain Bracket Rod, Long
CF1SLS	Not Shown	OBEDT	Brayer Fountain Side Frame Swivel Plug Lock Screw	CF34A	10	OBMAG	Brayer Fountain Index Plate
CF1SLS	Not Shown	OBEGO	Brayer Fountain Side Frame Swivel Plug Adjusting Screw	CF34N	10	OBMED	Brayer Fountain Index Plate Stud Wing Nut
CF2A	10	OBEBH	Brayer Fountain Side Frame, Right	CF34S	Not Shown	OBMIN	Brayer Fountain Index Plate Stud Washer
CF2S	10	OBELU	Brayer Fountain Side Frame Swivel Plug, Right	CF34SW	Not Shown	OBMOK	Brayer Fountain Throw-Off Rod Stop Washer
CF2SLS	Not Shown	OBEBK	Brayer Fountain Side Frame Swivel Plug Nut	CF35	10	OBMLU	Brayer Fountain Throw-Off Rod Stop Collar
CF2A	10	OBELI	Brayer Fountain Front Bar	CF35P	Not Shown	OBNAW	Brayer Fountain Throw-Off Rod Stop Collar Pin
CF3S	Not Shown	OBEME	Brayer Fountain Front Bar Screw	CF36A	10	OBNEG	Brayer Fountain Throw-Off Plate
CF4	10	OBENS	Brayer Fountain Rear Bar	CF36E	Not Shown	OBNTL	Brayer Fountain Throw-Off Plate Spring
CF4S	Not Shown	OBEPH	Brayer Fountain Rear Bar Screw	CF36P	Not Shown	OBNGS	Brayer Fountain Throw-Off Plate Roller Pin
CF5	Not Shown	OBEPQ	Brayer Fountain Side Frame Cap, Left				
CF5C	Not Shown	OBERT	Brayer Fountain Side Frame Cap Oil Cap	CF37	10	OBNTU	Brayer Fountain Throw-Off Plate Roller
CF5N	Not Shown	OBESH	Brayer Fountain Side Frame Cap Screw Wing Nut	CF38	10	OBOSB	Brayer Fountain Ratchet Lever Roller
CF5NP	Not Shown	OBETS	Brayer Fountain Side Frame Cap Screw Wing Nut Pin	CF38S	Not Shown	OBOCI	Brayer Fountain Ratchet Lever Roller Stud
CF5P	Not Shown	OBEEA	Brayer Fountain Side Frame Cap Pin	CF43C	Not Shown	OBODY	Brayer Fountain Throw-Off Rod Cotter
CF5S	Not Shown	OBETW	Brayer Fountain Side Frame Cap Screw	CF43E	10	OBOPA	Brayer Fountain Throw-Off Rod Spring
CF6	10	OBEXU	Brayer Fountain Bracket, Left	CF45	10	OBOGI	Brayer Fountain Safety Stop Rod
CF7	10	OBEXY	Brayer Fountain Bracket, Right	CF45E	Not Shown	OBOSH	Brayer Fountain Safety Stop Rod Pin
CF7P	3	OBEXU	Brayer Fountain Bracket Retaining Pin	CF45P	Not Shown	OBQJE	Brayer Fountain Safety Stop Rod Guide Pin
CF7S	Not Shown	OBFAF	Brayer Fountain Bracket Screw	CF46	10	OBOKA	Brayer Fountain Safety Stop Rod Handle
CF7SS	Not Shown	OBFEL	Brayer Fountain Bracket Set Screw	CF46P	Not Shown	OBOLP	Brayer Fountain Safety Stop Rod Handle Pin
CF7W	Not Shown	OBFRF	Brayer Fountain Bracket Set Screw Washer	CF49AA	10	OBOME	Brayer Fountain Roll Handwheel
CF8	10	OBFOO	Brayer Fountain Bracket, Right	CF49P	Not Shown	OBONS	Brayer Fountain Roll Handwheel Pin
CF9	10	OBFTU	Brayer Fountain Cover	CF55	Not Shown	OBOPL	Brayer Fountain Side Arm Washer
CF9L	Not Shown	OBGAK	Brayer Fountain Cover Latch	CF55C	Not Shown	OBOPU	Brayer Fountain Side Arm Washer Cotter
CF9R	Not Shown	OBGED	Brayer Fountain Cover Rivet	CF55N	Not Shown	OBORN	Brayer Fountain Side Arm Washer Stud Nut
CF10	Not Shown	OBG1T	Brayer Fountain Blade				
CF10S	Not Shown	OBGOB	Brayer Fountain Blade Screw				
CF13	10	OBGUS	Brayer Fountain Roll				
CF15	Not Shown	OBHAC	Brayer Fountain Roll Shaft				
CF16	10	OBHEN	Brayer Fountain Vibrating Roller				
CF18	Not Shown	OBHIL	Brayer Fountain Vibrating Roller Shaft				
CF19	Not Shown	OBHOT	Brayer Fountain Vibrating Roller Cam				
CF19B	Not Shown	OBHUM	Brayer Fountain Vibrating Roller Cam Ball				
CF19N	Not Shown	OBIBS	Brayer Fountain Vibrating Roller Cam Ball Screw Lock Nut				



*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.
 IMPORTANT—Be sure to mention size of press for which parts are being ordered.

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
CF55P	Not Shown	OBOSS	Brayer Fountain Side Arm Washer Dowel	R12BS	Not Shown	OCAHR	Crack Shaft Set Screw
CF55S	10	OBOYL	Brayer Fountain Side Arm Washer Stud	R12C	Not Shown	OCAJ1	Crack Shaft Oil Cup
CF85T	10	OBOVE	Brayer Fountain Blade Adjusting Screw	R12T	5	OCAKO	Crack Shaft Oil Tube
CF89	10	OBOWT	Brayer Fountain Ratchet Wheel	R12TC	Not Shown	OCALM	Crack Shaft Single Oil Tube Clip
CF89C	Not Shown	OBOX1	Brayer Fountain Ratchet Wheel Key	R12TCP	Not Shown	OCALT	Crack Shaft Single Oil Tube Clip Rivet
CF90	10	OBOYS	Brayer Fountain Ratchet Pawl	R13	5	OCAMI	Pinion Key
CF90S	Not Shown	OBOZI	Brayer Fountain Ratchet Pawl Screw	R13K	5	OCANO	Pinion Key
CF90J	Not Shown	OBFAN	Brayer Fountain Driver Stud	R14K33	5	OCAPU	Large Gear Cam Wheel
CF90JSC	Not Shown	OBES	Brayer Fountain Driver Stud Cotter	R14J5	Not Shown	OCARS	Large Gear Cam Wheel Steel Segment
CF90JSN	Not Shown	OBFIL	Brayer Fountain Driver Stud Nut	R14J5S	Not Shown	OCASM	Large Gear Cam Wheel Steel Segment Screw
CF90JSW	Not Shown	OBFOT	Brayer Fountain Driver Stud Washer				
CF92	10	OBPUK	Brayer Fountain Cover Knob	R15	4	OCATI	Rockers Lock Roller
CF99	Not Shown	OBQAW	Brayer Fountain Name Plate	R15C	4	OCAYA	Rockers Lock Roller Oil Cup
CF99R	Not Shown	OBQER	Brayer Fountain Name Plate Rivet	R15S	4	OCALK	Rockers Lock Roller Stud
CF99R	Not Shown	OBQIK	Brayer Fountain Ratchet Lever Stud	R15SN	4	OCAXY	Rockers Lock Roller Nut
CFR26	10	OBQON	Brayer Fountain Ratchet Rod	R16	6	OCAYN	Small Head and Lock Cam
CFR36S	10	OBQUE	Brayer Fountain Throw-Off Plate Stud	R17	3	OCAZE	Roller Arm
CFR43	10	OBRAY	Brayer Fountain Throw-Off Rod	R17N	Not Shown	OCBAD	Roller Arm Stud Nut
CFR90J5	Not Shown	OBRED	Brayer Fountain Driver	R17S	6	OCBEG	Roller Arm Stud
CFR90J5	Not Shown	OBHIG	Brayer Fountain Driver Screw	R17W	3	OCBHN	Roller Arm Washer
ER1A	Not Shown	OBRCT	Motor Bracket	R17WS	3	OCBWR	Roller Arm Washer Screw
ER1B	Not Shown	OBHUX	Motor Bracket Screw	R18	5	OCBWM	Gripper Cam Roller
ER1BS	3	OBHAK	Motor Bracket Set Screw (Short)	R18A	6	OCCL	Gripper Cam Roller Stud
ER1BSN	Not Shown	OBSEZ	Motor Bracket Set Screw Nut	R18SN	Not Shown	OCCEB	Gripper Cam Roller Stud Nut
ER1JSS	3	OBSSN	Motor Bracket Set Screw (Long)	R20	10	OCCKI	Hand Feed Teble Bracket
ER3AA	3	OBSCC	Motor Bracket Rail (Short)	R21	6	OCCEP	Roller Frame, Left
ER3N	3	OBSCU	Motor Bracket Rail Nut	R21S	6	OCCEU	Roller Frame Arm Stud
ER3B	3	OBTAI	Motor Bracket Rail Screw	R22	3	OCDDM	Roller Frame, Right
ER3AW	3	OBTEK	Motor Bracket Rail Screw Washer	R22J5	3	OCDET	Disc Lever Cam
ER3J5	3	OBTIN	Motor Bracket Rail (Long)	R22J5S	Not Shown	OCDEI	Disc Lever Cam Screw
GR1	Not Shown	OBTOG	Hand Feed Gear and Pinion Guard	R23A	3	OCDDO	Name Plate
GR1S	Not Shown	OBTUS	Hand Feed Gear and Pinion Guard Screw	R23P	Not Shown	OCDDM	Name Plate Pin
GR8	3	OBVAH	Disc Gear Guard	R23S	3	OCDEI	Name Plate Screw
GR8S	Not Shown	OBVRY	Disc Gear Guard Screw	R26	1	OCDEA	Fly Wheel
GR63	3	OBVIT	Form Roller Guard	R26K	1	OCEDY	Fly Wheel Key
GRF-1	2	OBVOL	Gear and Pinion Guard	R27	1	OCEFI	Roller Truck
GRF-1S	2	OBVUD	Gear and Pinion Guard Screw	R28L	3	OCEGO	Chase Lug (Bottom)
R0	5	OBWAT	Frame	R28LN	Not Shown	OCERS	Chase Lug Nut
R1A	4	OBWEX	Roller Arm Bracket	R28LP	Not Shown	OCERJ	Chase Lug Pin
R1K	4	OBWIN	Roller Arm Bracket Key	R28J5	4	OCERL	Chase Hook
R1S	1	OBWUJ	Roller Arm Bracket Screw (Short)	R30	5	OCELI	Chase Hook
R1BS	Not Shown	OBWUJ	Roller Arm Bracket Screw (Long)	R30S	3	OCERP	Chase Hook Lever Spring
R2W	Not Shown	OBXAC	Roller Arm Bracket Washer	R30H	5	OCENT	Chase Hook Lever Spring Hanger
R3	5	OBXEL	"Bed"	R30S	5	OCERU	Chase Hook Lever
R3TA	6	OBXIP	"Adjustable Bed Track, Left"	R30LS	6	OCKRD	Chase Hook Lever Screw
R3TCS	6	OBXOR	"Adjustable Bed Track Screw, Right"	R30N	6	OCESA	Chase Hook Nut
R3TR	Not Shown	OBXUM	"Adjustable Bed Track Chase Stop (Side)"	R30S	5	OCETH	Chase Hook Screw
R3TS	5	OBYAT	"Adjustable Bed Track Adjusting Screw (Upper)"	R31	5	OCIVL	"Gripper Bar"
R4A	5	OBYBU	"Platen"	R31K	6	OCERS	Gripper Bar Spring
R4PL	10	OBYCK	Cutting Plate	R31H	6	OCKXI	Gripper Bar Spring Hook
R4TA	5	OBYDO	"Adjustable Bed Track, Right"	R31P	Not Shown	OCERZ	Gripper Bar Pin
R4TS	5	OBYET	"Adjustable Bed Track Adjusting Screw (Lower)"	R32	5	OCFAB	Gripper Bar Roller
R6	4	OBVFA	Roller Lock	R32N	Not Shown	OCPEK	Gripper Bar Roller Screw Nut
R6S	Not Shown	OBVGI	Roller Lock Spring	R32S	Not Shown	OCFIS	Gripper Bar Roller Screw
R6R	4	OBVHA	Roller Lock Spring Rod	R33	Not Shown	OCFOM	"Cam Roller"
R6SS	Not Shown	OBVID	Roller Lock Set Screw	R33S	Not Shown	OCFUL	"Cam Roller Stud"
R7J5	3	OBVJU	"Disc"	R33SN	Not Shown	OCGAP	Cam Roller Stud Nut
R7J5S	Not Shown	OBVKA	Disc Stud	R33T	5	OCGRS	Cam Roller Oil Tube
R8A	3	OBVLE	Disc Bracket	R33TC	Not Shown	OCGIN	Cam Roller Oil Tube Clamp
R8C	3	OBVMO	Disc Bracket Oil Cup	R33TCP	Not Shown	OCGUR	Cam Roller Oil Tube Clamp Pin
R8S	1	OBVNS	Disc Bracket Screw	R36	9	OCGUP	Disc Lever Cam Roller
R8SW	Not Shown	OBVOM	Disc Bracket Washer	R36S	9	OCJAW	Disc Lever Cam Roller Stud
R10	3	OBVPA	Small Disc Gear	R36SC	Not Shown	OCJHT	Disc Lever Cam Roller Stud Cotter
R10C	3	OBVKL	Small Disc Gear Lock	R37-1	9	OCJIF	"Adjustable Disc Lever"
R10CP	Not Shown	OBVSM	Small Disc Gear Lock Limit Pin	R37-1N	Not Shown	OCJOP	Adjustable Disc Lever Adjusting Screw Nut
R10K	Not Shown	OBVTV	Small Disc Gear Lock Spring	R37-1P	9	OCJUM	Adjustable Disc Lever Pin
R10K	Not Shown	OBVUK	Small Disc Gear Key	R37-2	9	OCIBA	Adjustable Disc Lever Adjusting Screw
R10P	Not Shown	OBVVI	Small Disc Gear Pin	R37-2N	Not Shown	OCICE	Adjustable Disc Lever Link
R10W	Not Shown	OBVWA	Small Disc Gear Washer			OCIDI	Adjustable Disc Lever Link Stud Wing Nut
R10J5	3	OBVXA	Disc Gear Sleeve	R37-2P	9	OCIFO	Adjustable Disc Lever Link Pin
R10J5B	Not Shown	OBVZO	Disc Gear Sleeve Ball	R37-2PC	Not Shown	OCIGU	Adjustable Disc Lever Link Pin Cotter
R10J5CA	3	OBZAL	Disc Gear Lock Collar	R37-2B	9	OCJHA	Adjustable Disc Lever Link Stud
R10J5CASS	Not Shown	OBZKS	Large Disc Gear	R37-2BW	Not Shown	OCJHU	Adjustable Disc Lever Link Stud Washer
R11	3	OBZIF	Large Disc Gear Key	R37-3	9	OCIKK	Adjustable Disc Lever Arm
R11K	Not Shown	OBZOR	Large Disc Gear Key	R37-3P	Not Shown	OCILD	Adjustable Disc Lever Arm Pin
R11LW	Not Shown	OBZUN	Large Disc Gear Lock Washer	R37-4	9	OCIMP	Adjustable Disc Lever Bracket
R11S	Not Shown	OCABE	Large Disc Gear Screw	R37-4S	Not Shown	OCINT	Adjustable Disc Lever Bracket Screw
R11W	Not Shown	OCADU	Large Disc Gear Washer	R37-4SS	Not Shown	OCIPS	Adjustable Disc Lever Bracket Set Screw
R12	6	OCAP1	Crack Shaft	R37-5	Not Shown	OCIRT	Adjustable Disc Lever Shaft
R12H	5	OCAGL	Crack Shaft Bushing	R37-5LW	Not Shown	OCISA	Adjustable Disc Lever Shaft Lock Washer

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

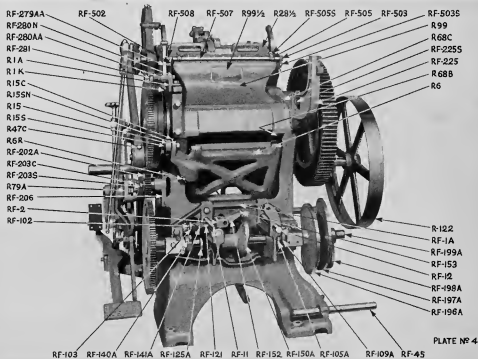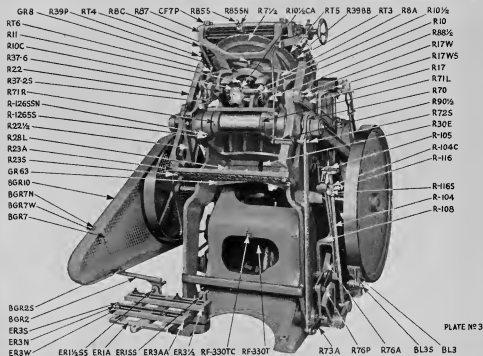

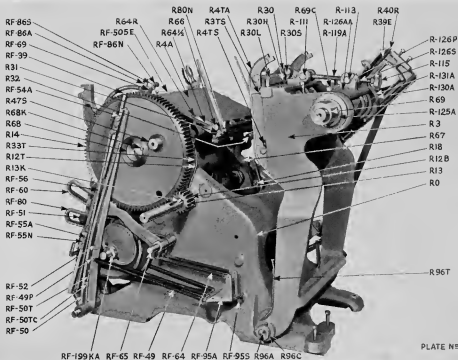


PLATE N° 5

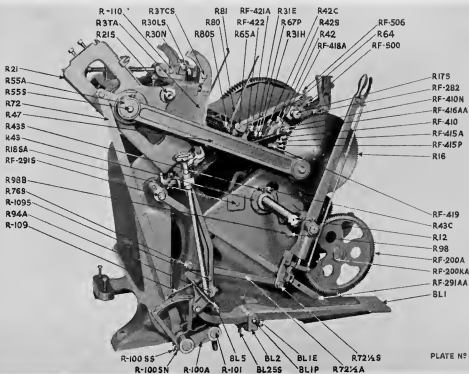


PLATE N° 6

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
R37-38	Not Shown	OCITI	Adjustable Disc Lever Shaft Screw	R768N	Not Shown	OCUPI	Throw-Off Outer Arm Screw Nut
R37-6	3	OCIVU	Adjustable Disc Lever Shaft Collar	R78A	8	OCUGS	Throw-Off Lever
R37-68S	Not Shown	OCIWU	Adjustable Disc Lever Shaft Collar Set Screw	R78B	8	OCUHL	Throw-Off Lever Bushing
R38	9	OCIXI	Silent Pawl Roller Cap	R78C	8	OCUJL	Throw-Off Lever Latch Bushing
R38R	9	OCIYA	Silent Pawl Roller	R78D	8	OCUKS	Throw-Off Lever Oil Cup
R38W	9	OCIZE	Silent Pawl Retaining Plate	R78GA	8	OCULP	Throw-Off Sliding Bar Gub
R38½	9	OCJAM	Silent Pawl Roller Carrier	R78GS	Not Shown	OCUMB	Throw-Off Sliding Plate Gub Screw
R38½EA	9	OCJEG	Silent Pawl Plunger Spring	R78GSW	Not Shown	OCUNT	Throw-Off Sliding Plate Gub Screw Washer
R38½K	Not Shown	OCJIT	Silent Pawl Key	R78L	8	OCUPA	Throw-Off Lever Latch
R38½PA	1	OCJOG	Silent Pawl Plunger	R78LC	8	OCURT	Throw-Off Lever Connection
R39	1	OCJUZ	Link Roller Double Saddle	R78LP	8	OCUSP	Throw-Off Lever Latch Pin
R39BB	3	OCKAR	Link Roller Saddle Ball Bearing	R78LPC	Not Shown	OCUTI	Throw-Off Lever Latch Pin Cotter
R39C	Not Shown	OCKEJ	Link Roller Saddle Rod Cotter	R78P	8	OCUVE	Throw-Off Lever Shear Pin
R39E	5	OCKIF	Link Roller Saddle Spring	R78PS	8	OCUWL	Throw-Off Lever Shear Pin Swivel
R39L	9	OCKOP	Link Roller Saddle Lifter	R78SS	8	OCUXI	Throw-Off Lever Shear Pin Swivel Set Screw
R39P	3	OCKUN	Link Roller Saddle Pin, Right	R78SAA	8	OCUYN	Throw-Off Lever Screw
R39P	Not Shown	OCLAS	Link Roller Saddle Rod Pin	R78SN	8	OCUZO	Throw-Off Lever Screw Nut
R39½P	1	OCLEY	Link Roller Saddle Pin, Left	R78SA	8	OCVAP	Throw-Off Lever Shear Pin Latch Lever
R40R	5	OCCLV	Link Roller Saddle Rod	R78SJ	8	OCVEM	Throw-Off Lever Shear Pin Latch Lever Pin
R42	6	OCLOP	Rocker Box Cap	R79A	4	OCVID	Throw-Off Lever Bracket
R42C	6	OCCLUB	Rocker Box Oil Cup	R79S	Not Shown	OCVOT	Throw-Off Lever Bracket Screw
R42S	6	OCMAT	Rocker Box Screw	R79SS	Not Shown	OCVUX	Throw-Off Lever Bracket Set Screw
R43	6	OCMED	Crank Shaft Box	R79SSN	Not Shown	OCWAN	Throw-Off Lever Bracket Set Screw Nut
R43C	6	OCMIP	Crank Shaft Box Oil Cup	R79SW	Not Shown	OCWET	Throw-Off Lever Bracket Screw Washer
R43S	6	OCMOK	Crank Shaft Box Screw	R80	6	OCWIP	Gripper, Left
R43W	Not Shown	OCMUB	Crank Shaft Box Washer	R80C	9	OCWOF	Extension Gripper, Left
R45	1	OCNAP	Link Roller Saddle Stud	R80CA	9	OCWUB	Gripper Extension 1" long
R45P	Not Shown	OCNEG	Link Roller Saddle Stud Oil Packing	R80CB	9	OCXAB	Gripper Extension 3" long
R45K	Not Shown	OCNIT	Link Roller Saddle Stud Guide Key	R80CD	9	OCXEL	Gripper Extension 3" long
R45W	2	OCNLS	Link Roller Saddle Stud Packing Plate	R80CE	9	OCXIP	Gripper Extension 4" long
R45WP	Not Shown	OCNUM	Pin	R80CF	9	OCXOF	Gripper Extension Finger
R47	6	OCOBR	Side Arm	R80N	5	OCXUM	Gripper Nut
R47B	Not Shown	OCOCA	Side Arm Bushing	R80S	6	OCYAB	Gripper Bolt
R47C	4	OCODI	Side Arm Oil Cup	R81	6	OCYBS	Gripper, Right
R47S	5	OCOFI	Side Arm Wrist Pin	R81C	9	OCYIL	Extension Gripper, Right
R48A	6	OCOGI	Side Arm Washer	R83	10	OCYON	Hand Feed Table
R48S	6	OCOHL	Side Arm Washer Screw	R83S	Not Shown	OCYUC	Hand Feed Table Screw
R61	9	OCOJI	Gripper Wrench	R85L	9	OCZAL	Fountain Side Frame, Left
R62	Not Shown	OCOKU	Rocker Arm	R85N	9	OCZED	Fountain Side Frame Cap Screw Nut
R62P	Not Shown	OCOLD	Rocker Arm Pin	R85R	9	OCZIM	Fountain Side Frame, Right
R63	10	OCOMA	Roller Stock	R85S	3	OCZOP	Fountain Adjusting Screw
R63B	Not Shown	OCONT	Roller Stock Steel Ball	R85SN	3	OCZUD	Fountain Adjusting Screw Wing Nut
R63B	Not Shown	OCOPF	Roller Stock Steel Spring	R85T	9	ODABE	Fountain Thumb Screw
R64	6	OCORP	Tympan Bale, Upper	R85½	9	ODACH	Fountain Ink Roll
R64L	9	OCOSK	Tympan Bale Lifter	R85½B	Not Shown	ODADS	Fountain Ink Roll Bushing
R64R	5	OCOTH	Tympan Bale Rivet	R86C	Not Shown	ODAFI	Fountain Side Frame Oil Cup
R64½	5	OCOVR	Tympan Bale, Lower	R86L	9	ODAGU	Fountain Side Frame Cap, Left
R65A	6	OCOWL	Platen Bar, Left	R86NP	Not Shown	ODAHL	Fountain Side Frame Cap Screw Pin
R65P	Not Shown	OCOXE	Platen Bar Pin	R86P	Not Shown	ODAJE	Fountain Side Frame Cap Down Pin
R65S	Not Shown	OCOYA	Platen Bar Screw	R86R	9	ODAKU	Fountain Side Frame Cap, Right
R66	5	OCOZU	Platen Bar, Right	R86S	Not Shown	ODALP	Fountain Side Frame Cap Screw
R67	5	OCPAF	Gripper Cam	R87	3	ODAMF	Fountain Bracket
R67P	6	OCPEM	Gripper Cam Pin	R87S	Not Shown	ODANT	Fountain Bracket Screw
R67P8S	Not Shown	OCPID	Gripper Cam Pin Set Screw	R87½	9	ODAPR	Fountain Cover
R68	5	OCPOX	Main Shaft	R87½L	Not Shown	ODARB	Fountain Cover Latch
R68B	4	OCPUF	Main Shaft Bushing	R87½R	Not Shown	ODASK	Fountain Cover Rivet
R68BP	Not Shown	OCQAV	Main Shaft Bushing Pin	R88	9	ODATA	Fountain Ratchet Lever
R68C	4	OCQID	Main Shaft Oil Cup	R88P	9	ODAVE	Fountain Ratchet Lever Pin
R68K	5	OCQIT	Main Shaft Key	R88½	3	ODAWN	Fountain Ratchet Lever Rod
R69	5	OCQOB	Back Shaft	R88½R	Not Shown	ODAXU	Fountain Ratchet Lever Rod Spring
R69C	5	OCQUA	Back Shaft Oil Cup	R89	9	ODAYM	Fountain Ratchet
R70	3	OCRAN	Throw-Off Saddle	R89K	Not Shown	ODBK	Fountain Ratchet Key
R70K	Not Shown	OCREK	Throw-Off Saddle Key	R89½	9	ODBAN	Fountain Ink Blade
R70SS	Not Shown	OCRIH	Throw-Off Saddle Set Screw	R89½S	Not Shown	ODBER	Fountain Ink Blade Screw
R71L	3	OCROP	Back Shaft Collar (Left)	R90	9	ODBIT	Fountain Ratchet Pawl
R71R	3	OCRUS	Back Shaft Collar (Right)	R90S	9	ODIOS	Fountain Ratchet Pawl Screw
R71SS	Not Shown	OCSPS	Back Shaft Collar Set Screw	R90½	3	ODBUM	Fountain Driver
R72	6	OCSEK	Throw-Off Back Connection	R90½S	Not Shown	ODCAN	Fountain Driver Screw
R72N	Not Shown	OCSSN	Throw-Off Back Connection Nut	R90½SC	Not Shown	ODCHL	Fountain Driver Screw Cotter
R72S	3	OCSSO	Throw-Off Back Connection Screw	R91	9	ODCIJ	Fountain Adjusting Block
R72SC	Not Shown	OCSTU	Cotter	R92	Not Shown	ODCOP	Fountain Cover Knob
R72½A	6	OCETA	Throw-Off Lower Connection	R92½	9	ODCUT	Fountain Handwheel
R72½S	6	OCTEL	Throw-Off Lower Connection Screw	R92½P	Not Shown	ODDAM	Fountain Handwheel Pin
R72½SN	Not Shown	OCOTN	Throw-Off Lower Connection Screw Nut	R93	9	ODDEZ	Fountain Front Brace
R73A	3	OCOTR	Throw-Off Slotted Piece	R93S	Not Shown	ODDCK	Fountain Front Brace Screw
R73A	3	OCUTU	Throw-Off Outer Arm	R93½	Not Shown	ODDGL	Fountain Back Separator Rod
R73P	3	OCUBA	Throw-Off Outer Arm Pin	R93½S	Not Shown	ODDUF	Fountain Back Separator Rod Screw
R76PC	Not Shown	OCUCU	Throw-Off Outer Arm Pin Cotter	R94A	6	ODEBA	Throw-Off Outer Arm Stud
R76S	6	OCUDS	Throw-Off Outer Arm Stud Nut	R94N	Not Shown	ODECI	Throw-Off Outer Arm Stud Nut

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.


IMPORTANT—Be sure to mention size of press for which parts are being ordered.

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
R94NW	Not Shown	ODEDU	Throw-Off Outer Arm Stud Washer	RF-5A	1	ODMOL	Feeder Drive Gear Guard
R94SS	Not Shown	ODEFV	Throw-Off Outer Arm Stud Set Screw	RF-6	2	ODMUY	Feeder Drive Gear Guard Brace
R96A	5	ODEGA	Motor Belt	RF-6S	2	ODNAD	Feeder Drive Gear Guard Brace Screw
R96B	Not Shown	ODEHLL	Bed Shaft	RF-8	Not Shown	ODNEP	Feed Table Lock Screw Shoe
R96C	5	ODEJO	Bed Shaft Bushing	RF-9	7	ODNIB	Feed Table Lock Screw
R96CS	Not Shown	ODEKS	Bed Shaft Collar	RF-9N	7	ODNOF	Feed Table Lock Screw Nut
R96K	Not Shown	ODELM	Bed Shaft Collar Set Screw	RF-10AA	7	ODNUH	Feed Table Bracket
R96S	Not Shown	ODEMT	Bed Shaft Key	RF-10G	7	ODOBS	Feed Table Bracket Gasket
R96T	Not Shown	ODENK	Bed Shaft Set Screw	RF-10T	7	ODOCK	Feed Table Pinion Shaft Oil Tube
R96TC	Not Shown	ODEPS	Bed Shaft Oil Tube	RF-11	4	ODODR	Feed Table Stationary Roll
R96TCT	Not Shown	ODERK	Bed Shaft Oil Tube Clamp	RF-12	4	ODOFT	Feed Table Movable Roll
R96TCTP	Not Shown	ODESL	Bed Shaft Oil Tube Clamp Pin	RF-13	7	ODOGI	Feed Table Adjusting Screw
R97	9	ODETU	Fountain Front Brace Rod	RF-13W	Not Shown	ODOHT	Feed Table Adjusting Screw Washer
R97S	Not Shown	ODEVL	Fountain Front Brace Rod Screw	RF-15	7	ODOJI	Feed Table Raising Handwheel
R98	6	ODEWP	Rocker Lock Shaft	RF-15P	Not Shown	ODOKA	Feed Table Raising Handwheel Pin
R98B	Not Shown	ODEXA	Rocker Lock Shaft Bushing	RF-16	7	ODOLF	Feed Table Release Bracket Stop
R98ESB	Not Shown	ODEYI	Rocker Lock Shaft Bushing Set Screw	RF-18A	2	ODOMB	Feed Table Bracket Guard
R99	4	ODEZE	Name Plate	RF-18S	Not Shown	ODONT	Feed Table Bracket Guard Screw
R99P	Not Shown	ODEAQ	Name Plate Pin	RF-19	7	ODOPIH	Feed Table Long Back Stop
R9915P	Not Shown	ODEFW	Fountain Name Plate	RF-19P	Not Shown	ODORI	Feed Table Long Back Stop Taper Pin
R9915P	Not Shown	ODEIV	Fountain Name Plate Pin	RF-19S	Not Shown	ODOSM	Feed Table Long Back Stop Screw
R-100A	6	ODFOS	Bed Shaft Adjusting Arm	RF-20A	7	ODOTU	Feed Table Long Back Stop Bracket
R-100BN	6	ODFUR	Bed Shaft Adjusting Arm Set Screw Nut	RF-20S	7	ODOVL	Feed Table Long Back Stop Bracket Clamping Screw
R-100SS	6	ODGAS	Bed Shaft Adjusting Arm Set Screw	RF-21	1	ODOWN	Feed Table Long Back Stop Post
R-101	6	ODGED	Bed Shaft Adjusting Screw Swivel Pin	RF-21BS	Not Shown	ODOXA	Feed Table Long Back Stop Post Set Screw
R-104	3	ODGIF	Bed Shaft Adjusting Screw	RF-22	7	ODOYT	Feed Table Long Back Stop Limit Pin
R-104C	3	ODGOL	Bed Shaft Adjusting Collar	RF-23	7	ODOZN	Feed Table Long Back Stop Limit Pin Lock Nut
R-104CP	Not Shown	ODGUP	Bed Shaft Adjusting Collar Pin	RF-25A	7	ODPAC	Feed Table Short Back Stop
R-104CS	Not Shown	ODHAM	Bed Shaft Adjusting Collar Pin Set Screw	RF-26A	7	ODPEW	Feed Table Short Back Stop Clamp Screw
R-105	3	ODHEN	Bed Shaft Adjusting Screw Handwheel	RF-27A	Not Shown	ODPIN	Feed Table Short Back Stop Clamp Screw Nut
R-105P	Not Shown	ODHIP	Bed Shaft Adjusting Screw Handwheel Pin	RF-28A	Not Shown	ODPOB	Feed Table Short Back Stop Clamp Screw Spring
R-106A	Not Shown	ODHOR	Bed Shaft Adjusting Tube	RF-30AA	7	ODPUG	Feed Table Front Stop
R-107	Not Shown	ODHUS	Bed Shaft Adjusting Tube Bushing	RF-30S	2	ODQAF	Feed Table Front Stop Screw
R-107P	Not Shown	ODIBA	Bed Shaft Adjusting Tube Bushing Pin	RF-32A	7	ODQEB	Feed Table Front Stop Blast Tapping
R-108	3	ODICT	Bed Shaft Adjusting Screw Bracket	RF-33A	7	ODQIG	Feed Table Front Stop Blast Nipple
R-108SS	Not Shown	ODIDE	Bed Shaft Adjusting Screw Bracket Set Screw	RF-34A	Not Shown	ODQOH	Feed Table Front Stop Blast Nipple Tube
R-109	6	ODIFR	Bed Shaft Adjusting Scale Pointer	RF-37A	7	ODQUI	Feed Table Front Stop End Blast Connection
R-109S	6	ODIGS	Bed Shaft Adjusting Scale Pointer Screw	RF-38A	7	ODKAT	Feed Table Front Stop End Blast Shut-Off
R-110	6	ODIHT	Bed Shaft Adjusting Screw Swivel Bracket	RF-38E	7	ODREM	Feed Table Front Stop End Blast Shut-Off Spring
R-110P	Not Shown	ODIJA	Bed Shaft Adjusting Screw Swivel Bracket Pin	RF-39W	Not Shown	ODRIK	Feed Table Front Stop End Blast Shut-Off Washer
R-110S	Not Shown	ODIKE	Bed Shaft Adjusting Screw Swivel Bracket Screw	RF-39	5	ODROF	Delivery Air Line Screen
R-111	5	ODILF	Bed Shaft Adjusting Screw Swivel Pin	RF-39HA	Not Shown	ODRUP	Delivery Air Line Screen Bushing
R-113	5	ODIMP	Bed Shaft Adjusting Screw Lock Screw	RF-39P	Not Shown	ODSAP	Delivery Air Line Screen Plug
R-113P	Not Shown	ODING	Bed Shaft Adjusting Screw Lock Screw Shoe	RF-40	2	ODSEB	Delivery Slide Air Tube
R-115	5	ODIPH	Bed Shaft Adjusting Screw Knob	RF-40P	Not Shown	ODSIC	Delivery Slide Air Tube Plug
R-115P	Not Shown	ODIRT	Bed Shaft Adjusting Screw Knob Pin	RF-41	9	ODSON	Delivery Bar
R-116	3	ODISH	Bed Shaft Adjusting Screw Swivel Pin	RF-41S	9	ODSRM	Delivery Bar Screen
R-116N	Not Shown	ODITS	Bed Shaft Adjusting Screw Swivel Nut	RF-43	9	ODTAC	Delivery Bar Sliding Tube
R-116S	3	ODIVA	Bed Shaft Adjusting Screw Swivel Screw	RF-43S	9	ODTKD	Delivery Bar Sliding Tube Screw
R-116W	Not Shown	ODIWU	Bed Shaft Adjusting Screw Swivel Washer	RF-45	1	ODTIG	Delivery Slide Shaft
R-119A	5	ODIXE	Bed Shaft Adjusting Screw	RF-47	2	ODTOK	Delivery Slide Air Tube Roller Carrier
R-119N	Not Shown	ODIYL	Bed Shaft Adjusting Screw Nut	RF-47S	2	ODTUR	Delivery Slide Air Tube Roller Carrier Clamp Screw
R-119W	Not Shown	ODIZY	Bed Shaft Adjusting Screw Washer	RF-49	5	ODUBL	Delivery Bar Pull-In Spring
R-122	4	ODJAK	Press Pulley	RF-49P	Not Shown	ODUCH	Delivery Bar Pull-In Spring Pin
R-125A	5	ODJEM	Bed Shaft Eccentric	RF-50	5	ODUDI	Delivery Bar Pull-In Spring Pin Cotter
R-126AA	5	ODJIX	Bed Shaft Eccentric Bracket	RF-50B	Not Shown	ODUFT	Delivery Slide
R-126P	5	ODJOG	Bed Shaft Eccentric Bracket Swivel Pin	RF-50P	2	ODUGS	Delivery Slide Bushing
R-126S	5	ODJUF	Bed Shaft Eccentric Bracket Swivel Pin Set Screw	RF-50T	5	ODUJE	Delivery Slide Oil Tube
R-126SS	Not Shown	ODKAT	Bed Shaft Eccentric Set Screw	RF-50TC	5	ODUKA	Delivery Slide Oil Tube Clamp
R-126SW	Not Shown	ODKER	Bed Shaft Eccentric Set Screw Lock Nut	RF-50TCS	Not Shown	ODULK	Delivery Slide Oil Tube Clamp Screw
R-130A	5	ODKIF	Bed Shaft Eccentric Bracket Swivel Pin Set Screw Washer	RF-51	5	ODUMP	Feeder Ball Bearing Cam Roller
R-130S	Not Shown	ODKOB	Bed Shaft Adjusting Scale Pointer	RF-52	5	ODUNT	Feeder Ball Bearing Cam Roller Pin
R-131A	5	ODKUC	Bed Shaft Adjusting Scale Pointer Screw	RF-53A	2	ODUPO	Delivery Slide Shoe
R-131P	Not Shown	ODLAS	Bed Shaft Adjusting Scale	RF-53B	2	ODURM	Delivery Slide Bushing Set Screw
RF-1A	4	ODLKT	Bed Shaft Adjusting Scale Pin	RF-54A	5	ODUSC	Delivery Slide Shoe Gib
RF-1C	Not Shown	ODLIC	Feeder Cam Shaft Bracket	RF-55A	5	ODUTE	Delivery Slide Shoe Gib Screw
RF-1S	Not Shown	ODLOB	Feeder Cam Shaft Bracket Oil Cup	RF-55N	5	ODUVV	Delivery Slide Shoe Gib Screw Nut
RF-2	4	ODMAG	Feed Table Elevator Shaft Bracket	RF-56	5	ODUWE	Delivery Bar Pull Down Spring
RF-2S	Not Shown	ODMEX	Feed Table Elevator Shaft Bracket Screw	RF-57A	2	ODUXI	Delivery Slide Hose Nipple
RF-3	Not Shown	ODMIN	Feed Table Elevator Cam Lever Spring Pin				

*Parts marked with an asterisk indicates special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

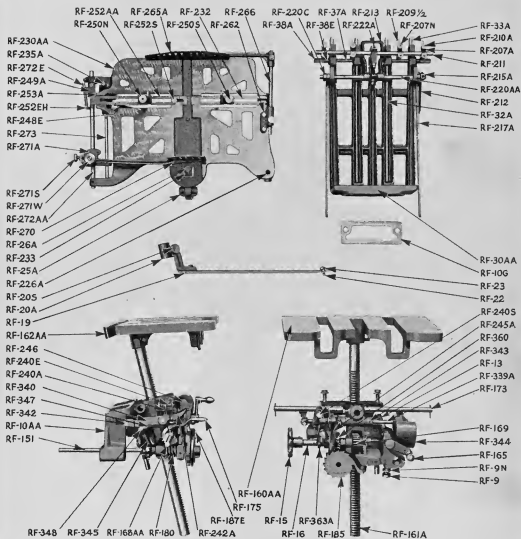

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
RF-578	2	ODUYA	Delivery Slide Hose Nipple Clamp Screw	RF-141A	4	OFERM	*Blast Valve Cam Lever
RF-58	2	ODUZO	Delivery Slide Air Hose	RF-144A	1	OFESY	Blast Valve Plunger
RF-60	2	ODVAP	Delivery Slide Air Tube Lift Lever	RF-144E	1	OFETU	Blast Valve Plunger Spring
RF-64	5	ODVEC	Delivery Slide Air Tube Lift Lever Spring	RF-144EH	1	OFEVA	Blast Valve Plunger Spring Connection
RF-65	3	ODVIM	Delivery Slide Air Tube Lift Lever Stud	RF-145	8	OFETW	Continuous Blast Screw
RF-68	9	ODVOH	Feed Bar Large Rubber Sucker Tip	RF-146	8	OFEXE	Continuous Blast Screw Lock Nut
RF-69	5	ODVUP	*Feed Air Line Screen	RF-147CP	1	OFEVR	Blast Valve Plunger Spring Stud
RF-69B	Not Shown	ODWAX	*Feed Air Line Screen Bushing	RF-147CP	Not Shown	OFEZO	Blast Valve Plunger Spring Stud Cotter
RF-70	2	ODWEZ	*Feed Slide Air Tube	RF-147W	Not Shown	OFAB	Blast Valve Plunger Spring Stud Washer
RF-70P	Not Shown	ODWIV	*Feed Slide Air Tube Plug	RF-150A	4	OFEC	Feed Table Elevator Cam
RF-70S	Not Shown	ODWOV	*Feed Slide Air Tube Plug Screw	RF-150SS	Not Shown	OFID	Feed Table Elevator Cam Set Screw
RF-71	1	ODWUF	Feed Slide Air Hose	RF-151	7	OFOFJ	Feed Table Elevator Shaft
RF-72	1	ODXAR	Feed Slide Air Tube Roller Carrier	RF-152	4	OFUUT	*Feed Table Elevator Shaft Cam Lever
RF-72CP	Not Shown	ODXEY	Feed Slide Air Tube Roller Carrier	RF-152E	Not Shown	OFAGX	Feed Table Elevator Shaft Cam Lever Spring
RF-72S	1	ODXIT	Feed Slide Air Tube Roller Carrier Clamp Screw	RF-152H	Not Shown	OPGEH	Feed Table Elevator Shaft Cam Lever
RF-74	1	ODXON	Feed Slide Air Tube Pull Down Spring	RF-152K	Not Shown	OFGIN	Feed Table Elevator Shaft Cam Lever Key
RF-75	1	ODXUP	*Feed Slide	RF-152P	Not Shown	OFGPO	Feed Table Elevator Shaft Cam Lever Roller Pin
RF-75T	1	ODYAB	*Feed Slide Oil Tube	RF-153	4	OFGUB	Feed Table Elevator Shaft Cam Lever Roller
RF-76	1	ODYEC	*Feed Slide Shoe	RF-160AA	7	OFHAT	Feed Table
RF-76SS	1	ODYID	*Feed Slide Shoe Set Screw	RF-161A	7	OFHEC	Feed Table Rack
RF-80	5	ODYOF	Feed Slide Air Tube Lift Lever	RF-161K	Not Shown	OFHIS	Feed Table Rack Key
RF-84	1	ODYUG	Feed Slide Hose Nipple	RF-161W	2	OFHOP	Feed Table Bumper Washer
RF-84S	1	ODZAH	Feed Slide Hose Nipple Clamp Screw	RF-162AA	7	OFHUG	Feed Table Front Bar
RF-86A	5	ODZEJ	*Feed Bar Air Tube Connection	RF-162P	Not Shown	OFIHR	Feed Table Front Bar Taper Pin
RF-86B	5	ODZIK	Feed Bar Limit Screw	RF-162S	Not Shown	OFILC	Feed Table Front Bar Screw
RF-86S	Not Shown	ODZOL	Feed Bar Limit Screw	RF-165	7	OFIDO	Feed Table Adjusting Screw Crank
RF-87	Not Shown	ODZUM	*Feed Bar Air Tube Connection Plug	RF-165S	Not Shown	OFIFE	Feed Table Adjusting Screw Set Screw
RF-91A	5	OFABS	Feed and Delivery Slide Spring Bracket	RF-168AA	7	OFIGA	Feed Table Pinion Shaft
RF-91S	5	OFACF	Feed and Delivery Slide Spring Bracket Screw	RF-169	7	OFIHM	*Feed Table Pinion
RF-100	2	OFADA	Delivery Air Valve Bracket	RF-169K	Not Shown	OFIKE	Feed Table Pinion Key
RF-100S	Not Shown	OFAFR	Delivery Air Valve Bracket Screw	RF-170A	1	OFILS	Feed Table Guide Finger Bracket, Right
RF-101	2	OFAGL	*Delivery Air Valve Cam Lever	RF-170B	1	OFIMT	Feed Table Guide Finger Bracket Screw
RF-101W	Not Shown	OFAHN	Delivery Air Valve Cam Lever Spacing Washer	RF-171A	1	OFING	Feed Table Guide Finger Bracket, Left
RF-102	4	OFAJU	Delivery Air Valve Cam Roller Pin	RF-172	1	OFIPU	*Feed Table Guide Finger
RF-103	4	OFAKL	Delivery Air Valve Cam Roller	RF-172S	1	OFIRE	Feed Table Guide Finger Screw
RF-104	Not Shown	OFALT	Delivery Air Valve Cam Lever Shaft	RF-173	7	OFISH	Feed Table Guide Finger Shaft
RF-105A	4	OFAMB	Delivery Air Valve Cam	RF-173CP	Not Shown	OFITS	Feed Table Guide Finger Shaft Cotter
RF-105SS	Not Shown	OFAND	Delivery Air Valve Cam Set Screw	RF-173SS	Not Shown	OFIVU	Feed Table Guide Finger Shaft Set Screw
RF-106	8	OFAPH	Delivery Air Valve Bracket Pipe Elbow	RF-175	1	OFIXU	Feed Table Release Handle Pin
RF-107	8	OFARQ	Delivery Air Valve Bracket Pipe Short Nipple	RF-177	1	OFIYA	Feed Table Release Handle Swivel Pin
RF-108	8	OFAST	Delivery Air Valve Bracket Pipe Long Nipple	RF-180	7	OFIZL	Feed Table Worm
RF-109A	4	OFATU	Delivery Cutout Valve Cam	RF-180K	Not Shown	OFJAZ	Feed Table Worm Key
RF-110	2	OFAYV	*Delivery Cutout Valve Cam Lever	RF-182	Not Shown	OFJER	Feed Table Ratchet Wheel Sleeve
RF-113	8	OFAXL	*Delivery Cutout Valve	RF-185	7	OFJIG	Feed Table Ratchet Wheel
RF-113P	Not Shown	OFAXO	Delivery Cutout Valve Cotter	RF-185K	Not Shown	OFJOB	Feed Table Ratchet Wheel Key
RF-113S	Not Shown	OFAYE	Delivery Cutout Valve Screw	RF-187	2	OFJUS	Feed Table Ratchet Pawl
RF-114	8	OFAZL	Delivery Cutout Valve Plunger	RF-187P	2	OFKAN	Feed Table Ratchet Pawl Pin
RF-115	8	OFBAN	Delivery Cutout Valve Plunger Spring	RF-187E	7	OFKKB	Feed Table Ratchet Pawl Spring
RF-115S	2	OFBBG	Delivery Air Valve	RF-187ES	Not Shown	OFKPI	Feed Table Ratchet Pawl Spring Screw
RF-115S1C	Not Shown	OFBIF	*Delivery Air Valve Cotter	RF-188A	1	OFKOF	*Feed Table Ratchet Pawl Lever
RF-116	8	OFBOB	Delivery Cutout Valve Hose Nipple	RF-188SS	Not Shown	OFKUD	Feed Table Ratchet Pawl Spring Washer
RF-117	2	OFBUR	Delivery Cutout Valve Air Hose	RF-188W	Not Shown	OFLAM	Feed Table Ratchet Pawl Spring Washer
RF-119	Not Shown	OFBAC	Blast Muffler Nipple	RF-189	2	OFLEX	Feed Table Ratchet Latch Stud
RF-120A	1	OFBDD	Feed and Blast Valve Bracket	RF-189CP	Not Shown	OFPLZ	Feed Table Ratchet Latch Pin Cotter
RF-120S	Not Shown	OFBIC	Feed and Blast Valve Bracket Screw	RF-189W	Not Shown	OFLOY	Feed Table Ratchet Latch Pin Cotter Washer
RF-121	4	OFBIV	Feed Air Valve Cam Lever	RF-190A	2	OFLUW	Feed Table Ratchet Pawl Latch
RF-121SS	Not Shown	OFBCK	Feed Air Valve Cam Lever Screw	RF-195A	2	OFMAD	Feed Slide Air Tube Raising Cam
RF-121SSN	Not Shown	OFDAW	Feed Air Valve Cam Lever Screw Lock Nut	RF-196A	4	OFMEN	Feed Slide Pushout Cam
RF-122	8	OFDEY	Feed Table Blast Hose	RF-197A	4	OFMIS	Delivery Slide Air Tube Raising Cam
RF-122C	8	OFDIJ	Feed Table Blast Hose Clamp	RF-198A	4	OFMOT	Delivery Slide Pushout Cam
RF-124	Not Shown	OFDON	Feed Air Valve Cam Lever Shaft	RF-199A	4	OFMUK	*Feeder Cam Shaft
RF-125A	8	OFDUL	Feed Air Valve Cam	RF-199KA	5	OFNAG	Feeder Cam Shaft Key
RF-126A	1	OFEBE	*Blast Muffler	RF-200A	6	OFNET	Feeder Drive Gear
RF-127A	1	OFECT	*Blast Muffler Plate	RF-200KA	6	OFNIC	Feeder Drive Gear Key
RF-130	1	OFEDA	Feed Starting Lever Bracket	RF-202A	4	OFNOB	*Feeder Drive Intermediate Gear
RF-133	1	OFEFI	*Feed Starting Lever	RF-203A	Not Shown	OFNUM	Feeder Drive Intermediate Gear Shaft
RF-134	1	OFEGL	Feed Starting Lever Latch Pin	RF-203C	4	OFPOB	Feeder Drive Intermediate Gear Shaft Oil Cup
RF-134CP	Not Shown	OFEHR	Feed Starting Lever Latch Pin Cotter	RF-203S	4	OFPOC	Feeder Drive Intermediate Gear Shaft Screw
RF-134W	Not Shown	OFEJY	Feed Starting Lever Latch Pin Washer	RF-205A	Not Shown	OFODI	Feeder Drive Intermediate Gear Bushing
RF-136	1	OFERU	Feed Starting Lever Latch	RF-206	4	OFOGU	Feeder Drive Intermediate Gear Bracket
RF-137	1	OFELN	Blast Valve Connection	RF-207A	7	OFOHA	*Feed Table Stripper Wire Bracket
RF-138	1	OFEMA	Blast Adjusting Screw	RF-207N	7	OFQJY	Feed Table Stripper Wire Bracket Lock Nut
RF-139	1	OFENS	Blast Adjusting Screw Nut				
RF-140A	4	OFEFU	Blast Valve Cam				

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for parts as being ordered.

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description
RF-207S	Not Shown	OFOKI	Feed Table Stripper Wire Bracket Screw
RF-209 1/2	7	OFOLK	Feed Table Stripper Wire
RF-210A	7	OFOMT	Feed Table Stripper Wire Clamp Screw
RF-210W	Not Shown	OFONY	Feed Table Stripper Wire Clamp Screw Washer
RF-211	7	OFOPR	Feed Table Stripper Wire Bracket Shaft
RF-211CP	Not Shown	OFORK	Feed Table Stripper Wire Bracket Shaft Spring Cotter
RF-212	7	OFOSQ	Feed Table Feeder Spring
RF-213A	7	OFOTA	Feed Table Feeder
RF-213SS	Not Shown	OFOTV	Feed Table Feeder Set Screw
RF-215A	7	OFOWP	Feed Table Feeder Shaft Stop Collar
RF-215S	Not Shown	OFOWL	Feed Table Feeder Shaft Stop Collar Set Screw
RF-217A	7	OFOWD	Feed Table Feeder Lift Rod
RF-217P	Not Shown	OFOWE	Feed Table Feeder Lift Rod Spring Pin
RF-218A	Not Shown	OFOPD	Feed Table Feeder Lift Rod End
RF-220AA	7	OFEBE	Feed Table Feeder Shaft
RF-220CS	Not Shown	OFETQ	Feed Table Feeder Shaft Collar
RF-222A	7	OFOPX	Feed Table Feeder Shaft Collar Set Screw
RF-222S	Not Shown	OFPUZ	Feed Table Feeder Trip
RF-222AS	Not Shown	OFRAF	Feed Table Feeder Trip Screw
RF-222SS	Not Shown	OFREX	Feed Table Feeder Trip Set Screw
RF-222SSN	Not Shown	OFRIH	Feed Table Feeder Trip Set Screw Nut
RF-225	4	OFROK	Delivery Table Locking Pin
RF-225S	4	OFROK	Delivery Table Bracket Screw
RF-226A	7	OFSDA	Delivery Table Post
RF-230AA	7	OFSEZ	*Delivery Table
RF-230SS	2	OFSIK	Delivery Table Set Screw
RF-232	7	OFSON	Delivery Table Jogger Plate, Right
RF-233	7	OFSDR	Feed Table Short Back Stop Plate
RF-233A	7	OFSTG	Feed Table Locking Pin
RF-233CP	Not Shown	OFSTF	Feed Table Locking Pin Cotter
RF-235E	1	OFITP	Delivery Table Locking Pin Spring
RF-235W	Not Shown	OFOTD	Delivery Table Locking Pin Washer
RF-236	1	OFUTU	Feed Startling Lever Screw
RF-236N	Not Shown	OFUBA	Feed Startling Lever Screw Nut
RF-240A	7	OFUCE	Feed Table Elevator Adjusting Screw
RF-240E	7	OFUDI	Feed Table Elevator Adjusting Screw Spring
RF-240S	7	OFUFT	Feed Table Elevator Adjusting Screw
RF-240SS	Not Shown	OFUGO	Feed Table Elevator Adjusting Screw Bracket Set Screw
RF-242A	7	OFUHL	Feed Table Elevator Trip Trigger
RF-243	1	OFUJA	Feed Table Elevator Trip Return Lever
RF-243P	Not Shown	OFUKR	Feed Table Elevator Trip Return Lever Pin
RF-243SS	Not Shown	OFULM	Feed Table Elevator Trip Return Lever Set Screw
RF-245A	7	OFUMS	Feed Table Elevator Trip Bracket
RF-245P	Not Shown	OFUNK	Feed Table Elevator Trip Bracket Pin
RF-246	7	OFUPE	Feed Table Elevator Trip
RF-246P	Not Shown	OFURK	Feed Table Elevator Trip Pin
RF-246W	Not Shown	OFUSL	Feed Table Elevator Trip Pin Washer
RF-248E	7	OFUTE	Delivery Table Side Jogger Plate Spring
RF-249A	7	OFUVR	Delivery Table Side Jogger Cam
RF-249SS	1	OFUWA	Delivery Table Side Jogger Cam Set Screw
RF-250	1	OFUXY	Delivery Table Side Jogger
RF-250N	7	OFUYI	Delivery Table Side Jogger Nut
RF-250S	7	OFUZA	Delivery Table Side Jogger Screw
RF-252AA	7	OFVAB	*Delivery Table Jogger Plate, Left
RF-252EH	7	OFVEN	Delivery Table Jogger Plate Spring Pin
RF-252S	7	OFVIQ	Delivery Table Jogger Plate Screw
RF-253A	7	OFVGC	Delivery Table Jogger Plate Gb
RF-253S	Not Shown	OFVUR	Delivery Table Jogger Plate Gb Screw
RF-255A	Not Shown	OFWAH	Delivery Table Side Jogger Cam Roll
RF-255A	Not Shown	OFWFE	Delivery Table Side Jogger Cam Roll Pin
RF-262	7	OFWIP	Delivery Table Front Jogger Rod Bracket
RF-262S	Not Shown	OFWOM	Delivery Table Front Jogger Rod Bracket Screw
RF-265A	7	OFWUK	Delivery Table Front Jogger
RF-265S	1	OFVAL	Delivery Table Front Jogger Adjusting Screw
RF-265SS	1	OFYEG	Delivery Table Front Jogger Set Screw
RF-266	7	OFVIN	Delivery Table Front Jogger Rod
RF-266P	Not Shown	OFVOD	Delivery Table Front Jogger Rod Pin
RF-268	Not Shown	OFVUJ	Delivery Table Rear Jogger Ball
RF-269	Not Shown	OFZAN	Delivery Table Rear Jogger Ball Spring
RF-270	7	OFZES	Delivery Table Rear Jogger

Part Number	Part Shown on Plate No.	Code	Name and Description
RF-271A	7	OFZIF	Delivery Table Rear Jogger Post
RF-271P	Not Shown	OFZOR	Delivery Table Rear Jogger Stop Pin
RF-271S	7	OFZUN	Delivery Table Rear Jogger Stop Pin
RF-271W	7	OGABE	Delivery Table Rear Jogger Post Washer
RF-271WS	Not Shown	OGACI	Delivery Table Rear Jogger Post Washer Screw
RF-272AA	7	OGADO	Delivery Table Rear Jogger Operating Shaft
RF-272E	7	OGAFU	Delivery Table Rear Jogger Operating Shaft Spring
RF-272ES	Not Shown	OGAGY	Delivery Table Rear Jogger Operating Shaft Spring Screw
RF-273	7	OGAHR	Delivery Table Rear Jogger Guide Rod
RF-273SS	Not Shown	OGAJA	Delivery Table Rear Jogger Guide Rod Set Screw
RF-279AA	4	OGAKR	Delivery Table Jogger Cam Lever
RF-280AA	4	OGALP	Delivery Table Jogger Cam Lever Screw
RF-280N	4	OGAMB	Delivery Table Jogger Cam Lever Screw Nut
RF-281	4	OGANT	Delivery Table Jogger Cam Lever Roller
RF-282	6	OGAPL	Delivery Table Jogger Cam Lever Roller Pin
RF-288	8	OGARD	Throw-Off Plunger
RF-288P	8	OGAST	*Throw-Off Plunger Pin
RF-289	8	OGATH	Throw-Off Plunger Spring
RF-291AA	6	OGAVR	*Throw-Off Sliding Bar
RF-291B	Not Shown	OGAWK	Throw-Off Sliding Bar Bushing
RF-291S	6	OGAXO	*Throw-Off Sliding Bar Stud
RF-292	8	OGAYY	*Throw-Off Sliding Bar Guide
RF-293	Not Shown	OGAZU	Throw-Off Sliding Bar Guide Pin
RF-298	8	OGBAC	Throw-Off Rubber Hose
RF-300	8	OGBED	Pump Cylinder
RF-301	8	OGBIF	*Pump Top
RF-301S	8	OGBOG	Pump Top Screw
RF-302B	8	OGBUH	Pump Top Bushing
RF-302HS	8	OGCAJ	Pump Top Bushing Set Screw
RF-303G	8	OGCEK	Pump Top Gland
RF-303N	8	OGCIL	Pump Top Gland Nut
RF-302NHS	8	OGCOM	Pump Gland Nut Set Screw
RF-303A	8	OGGUN	*Pump Base
RF-303S	8	OGDAP	Pump Base Screw
RF-307A	8	OGDEQ	*Pump Piston
RF-307E	8	OGDIR	Pump Piston Expanding Spring
RF-307P	8	OGDOS	Pump Piston Rod Packing
RF-307W	8	OGDUT	Pump Piston Leather Ring
RF-308	8	OGERI	*Pump Valve
RF-308S	8	OGECK	Pump Valve Gage
RF-308C	8	OGEDU	Pump Valve Cap
RF-308E	8	OGERT	Pump Valve Spring
RF-310A	8	OGELG	Pump Valve Flanged Washer
RF-310E	8	OGERD	Pump Valve Flanged Washer Screw
RF-310SW	8	OGEJE	Pump Valve Screw Washer
RF-311A	8	OGEKA	*Pump Crank Shaft Bearing Top
RF-311S	8	OGELB	Pump Crank Shaft Bearing Top Screw
RF-312	8	OGEMS	*Pump Crank Shaft Bearing Bottom
RF-325	8	OGENF	Pump Piston Rod
RF-325N	8	OGEPY	Pump Piston Rod Lock Nut
RF-329	8	OGERF	Pump Gasket
RF-330	8	OGESK	Pump Shaft
RF-330S	8	OGETY	Pump Shaft Set Screw
RF-330SSN	8	OGQVO	Pump Shaft Set Screw Nut
RF-330T	3	OGWPP	Pump Shaft Oil Tube
RF-330TC	3	OGEXT	Pump Shaft Oil Tube Clamp
RF-333	8	OGZYU	Pump Blast Hose
RF-333G	8	OGRZI	Pump Blast Hose Clamp
RF-334	8	OGFAP	Pump Blast Hose Nipple
RF-335	8	OGFEW	Pump Vacuum Hose Nipple
RF-336	8	OGFTV	Throw-Off Hose Nipple
RF-337	2	OGFOY	Feed Air Line "V" Fitting
RF-339A	7	OGFUM	Feed Table Feeder Lift Lever Shaft
RF-340	7	OGGAB	Feed Table Feeder Lift Lever Pin
RF-341	7	OGLEG	Feed Table Feeder Lift Lever Pin
RF-343	7	OGGID	Feed Table Feeder Lift Shaft Collar
RF-343SS	Not Shown	OGGOF	Feed Table Feeder Lift Lever Set Screw
RF-344	7	OGGUH	Feed Table Feeder Counter Weight
RF-345	7	OGHAL	Feed Table Feeder Lift Cam
RF-345SS	Not Shown	OGHEM	Feed Table Feeder Lift Cam Set Screw
RF-347	7	OGHIN	Feed Table Feeder Lift Cam Lever
RF-347P	Not Shown	OGHOP	Feed Table Feeder Lift Cam Lever Pin
RF-347SS	Not Shown	OGHUQ	Feed Table Feeder Lift Cam Lever Pin Screw
RF-348	7	OGIBU	Feed Table Feeder Lift Cam Lever Roller

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts

IMPORTANT—Be sure to mention size of press for which parts are being ordered

COMPONENT PARTS LIST—Continued

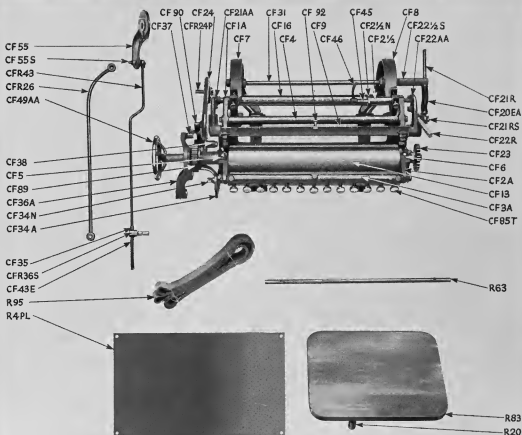


PLATE No 10

Part Number	Part Shown on Plate No.	Code	Name and Description
RF-350A	2	OGICO	Feed Cam Shaft Brace Connection
RF-350BS	Not Shown	OGIDE	Feed Cam Shaft Brace Connection Set Screw
RF-351A	2	OGIFA	Feed Cam Shaft Brace
RF-351S	2	OGIGS	Feed Cam Shaft Brace Screw
RF-353	8	OGIHK	Delivery Vacuum Pipe Connection Support
RF-360	7	OGIKU	Feed Table Worm Gear
RF-361	Not Shown	OGILF	Feed Table Fixed Release Ratchet
RF-362	Not Shown	OGIME	Feed Table Worm Gear Sleeve
RF-363A	7	OGING	Feed Table Sliding Release Ratchet
RF-364	Not Shown	OGIPS	Feed Table Sliding Release Ratchet Key
RF-365	Not Shown	OGIRB	Feed Table Sliding Release Ratchet Spring
RF-366	2	OGISM	Feed Table Sliding Release Ratchet Spring Collar
RF-366S	Not Shown	OGITA	Feed Table Sliding Release Ratchet Spring Set Screw
RF-367	8	OGIVU	*Feed Air Line Pipe Street Elbow
RF-369	8	OGIWA	*Feed Air Line Pipe Tee
RF-370	9	OGIXL	*Feed Bar Clamp Tube
RF-372	9	OGIYA	*Feed Bar Sliding Tube
RF-375	9	OGIZO	*Feed Bar Sucker Tip Holder Clamp Screw
RF-376	9	OGJAW	*Feed Bar Cross Head

Part Number	Part Shown on Plate No.	Code	Name and Description
RF-378	9	OGJEX	Feed Bar Rubber Sucker Tip Head
RF-381	9	OGJIY	Feed Bar Metal Sucker Tip (Long)
RF-382	9	OGJOE	Feed Bar Metal Sucker Tip (Short)
RF-383	9	OGJUR	Feed Bar Rubber Sucker Tip Holder (Long)
RF-384	9	OGKAS	Feed Bar Rubber Sucker Tip Holder (Short)
RF-386	9	OGKET	Feed Bar Cross Head Plug
RF-389	9	OGKIV	Feed Bar Small Rubber Tip
RF-390	9	OGKOP	Feed Bar Dummy Sucker
RF-391	9	OGKUQ	Rubber Sucker Tip Entry Face (Small)
RF-392	9	OGLAN	Rubber Sucker Tip Entry Face (Large)
RF-396	9	OGLEM	Delivery Bar Sucker Tip Head
RF-399	9	OGILF	Feed Table Setting Gauge
RF-407A	9	OGLOK	*Register Gauge Finger (4 1/2" long)
RF-407E	9	OGLUJ	*Register Gauge Finger Spring
RF-407N	9	OGMAH	*Register Gauge Finger Spring Nut
RF-407S	Not Shown	OGMEG	*Register Gauge Finger Spring Stud
RF-407 1/2 A	9	OGMIF	*Register Gauge Finger (5 1/2" long)
RF-408A	9	OGMOD	*Register Gauge Finger (2 1/4" long)
RF-408 1/2 A	9	OGMUC	*Register Gauge Finger (4" long)
RF-409A	9	OGNAB	*Register Gauge Finger (3 1/2" long)
RF-410	6	OGNEW	*Register Operating Spool
RF-410N	6	OGNIV	*Register Operating Spool Adjusting Nut


*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

COMPONENT PARTS LIST—Continued

Part Number	Part Shown on Plate No.	Code	Name and Description	Part Number	Part Shown on Plate No.	Code	Name and Description
RF-411	Not Shown	OGNOT	Register Operating Spool Stud	RF-482A	8	OGUYT	*Two-Up Feed Table Auxiliary Short Back Stop (Special)
RF-415A	6	OGNUS	*Register Operating Spool Cam	RF-483A	8	OGUZZ	Two-Up Feed Table Auxiliary Short Back Stop (Special)
RF-415P	6	OGGBA	*Register Operating Spool Cam Pin	RF-484	8	OGVAL	Two-Up Feed Table Auxiliary Short Back Stop Bracket (Special)
RF-416AA	6	OGGCH	Register Operating Spool Cam Stud	RF-485	Not Shown	OGVED	Two-Up Feed Table Auxiliary Feeler (Special)
RF-416N	Not Shown	OGODY	Register Operating Spool Adjusting Lock Nut	RF-486	9	OGVIP	*Feed Bar Double Rubber Sucker Tip, L. H. (Special)
RF-418A	6	OGOFE	Register Operating Connecting Link Spring	RF-487	9	OGVOF	*Feed Bar Double Rubber Sucker Tip, R. H. (Special)
RF-419	6	OGOGI	Register Operating Connecting Link	RF-490	8	OGVUC	Two-Up Feed Table Auxiliary Long Back Stop Shaft (Special)
RF-421A	6	OGGHC	Register Operating Arm Pin	RF-491	8	OGWAN	Two-Up Feed Table Auxiliary Short Back Stop Adjustable Shaft (Special)
RF-422	6	OGOKS	*Register Operating Arm	RF-491S	Not Shown	OGWET	Two-Up Feed Table Auxiliary Short Back Stop Adjustable Shaft Screw (Special)
RF-422S	Not Shown	OGOLK	Register Operating Arm Set Screw	RF-492	8	OGWIL	*Two-Up Short Back Stop Shaft Bracket (Special)
RF-425	9	OGOMP	Register Bracket Guide Shaft	RF-500	6	OGWOH	Hold Down Operating Lever
RF-428A	9	OGONC	Register Bracket Operating Shaft	RF-500S	Not Shown	OGWUZ	Hold Down Operating Lever Set Screw
RF-428CP	Not Shown	OGOPU	Register Bracket Operating Shaft Cotter	RF-502	4	OGYAK	Hold Down Bracket, Left
RF-428W	Not Shown	OGORT	Register Bracket Operating Shaft Washer	RF-503	4	OGYES	Hold Down Bracket, Right
RF-429	Not Shown	OGOSL	Register Bracket Operating Shaft Collar	OGYIK	4	OGYIK	Hold Down Bracket Screw
RF-429S	Not Shown	OGOTZ	Register Bracket Operating Shaft Collar Set Screw	RF-505	4	OGYOT	Hold Down Wire Bracket
RF-432A	9	OGOVT	*Register Bracket Operating Shaft Bevel Gear	RF-505S	5	OGYUM	Hold Down Wire
RF-432K	Not Shown	OGOWJ	Register Bracket Operating Shaft Bevel Gear Key	RF-505S	4	OGZAP	Hold Down Wire Bracket Clamp Screw
RF-436A	9	OGOXE	Register Bracket Lock Screw	RF-506	6	OGZEN	Hold Down Wire Bracket Washer
RF-436E	Not Shown	OGOYB	Register Bracket Lock Screw Spring	RF-506S	Not Shown	OGZIF	Hold Down Wire Bracket Washer Screw
RF-437AA	Not Shown	OGGZA	Register Bracket Post	RF-507	4	OGZUL	Hold Down Shaft Washer
RF-437BS	Not Shown	OGPAP	*Register Bracket Post Set Screw	RF-507W	Not Shown	OGZUL	Hold Down Shaft Washer
RF-438A	9	OGFES	*Register Bracket Post Bevel Gear	RF-508	4	OHABS	Hold Down Spring
RF-439AA	9	OGPIT	Register Bracket	RF-508	4	OHACL	*Delivery Head for Folders (Special)
RF-440A	9	OGPOV	*Register Bracket Finger Holder	RF-561	9	OHADI	Delivery Head Pick-Up Finger Plunger (Special)
RF-440N	Not Shown	OGPUZ	Register Bracket Finger Screw Nut	RF-562	9	OHAPT	Delivery Head Pick-Up Finger (Special)
RF-440S	Not Shown	OGRAY	Register Bracket Finger Screw	RF-562	9	OHAGU	*Electric Heater (Special)
RF-443A	9	OGREX	*Register Finger (6 1/2" long)	OHAIJ	9	OHAIJ	Electric Heater Cord (Special)
RF-444	Not Shown	OGRIW	Electric Heater Cross Bar (Special)	RF-810	1	OHAKI	Impression Counter
RF-445A	9	OGROK	Electric Heater Bracket (Special)	RT3	3	OHALF	Bed Extension Track, Left
RF-446A	9	OGRUJ	Electric Heater Post (Special)	RT3S	Not Shown	OHAMP	Bed Extension Track Screw
RF-447	8	OGSAH	Electric Heater Clamp Screw	RT4	3	OHANT	Bed Extension Track, Right
RF-450	9	OGSEG	Delivery Bar Double Rubber Sucker Tip Holder	RT5	3	OHAPS	Bed Extension Track Pin
RF-451	9	OGSIF	Delivery Bar Double Metal Sucker Tip	RT6	3	OHAGU	Bed Extension Track Adjusting Screw
RF-452	9	OGSOD	*Delivery Bar Double Metal Sucker Tip, R. H. (Long)	RT6N	Not Shown	OHARD	Bed Extension Track Adjusting Screw Nut
RF-453	9	OGSUC	Feed Bar Double Rubber Sucker Tip Holder, L. H.	RT6W	Not Shown	OHASK	Bed Extension Track Adjusting Screw Washer
RF-454	9	OGTAB	Feed Bar Double Rubber Sucker Tip Holder, R. H.	RX99	Not Shown	OHATY	Foundation Roll Shaft
RF-455	9	OGTEM	Feed Bar Double Metal Sucker Tip, L. H.	TR27	1	OHAVL	*Trip Truck Sliding Sleeve
RF-456	9	OGTIN	Feed Bar Double Metal Sucker Tip, R. H.	TR27E	Not Shown	OHAWA	Trip Truck Spring
RF-457	9	OGTOP	Feed Bar Double Metal Sucker Tip, L. H. (Long)	TR27P	Not Shown	OHAXA	Trip Truck Pin
RF-458	9	OGTUQ	Feed Bar Double Metal Sucker Tip, R. H. (Long)	TR27S	Not Shown	OHAYB	Trip Truck Roller
RF-459	9	OGUBA	Feed Bar Double Rubber Sucker Tip, L. H.	XD1C	Not Shown	OHAZE	Vibrator Box Stud Cotter
RF-460	9	OGUCB	Feed Bar Double Rubber Sucker Tip, R. H.	XD1E	Not Shown	OHABM	Vibrator Box Stud Spring
RF-461	9	OGUDI	1/4" Headless Set Screw Wrench	XD1N	Not Shown	OHIBG	Vibrator Box Stud Nut
RF-462	9	OGUFO	1/4" Headless Set Screw Wrench	XD1P	Not Shown	OHIBD	Vibrator Box Stud Pin
RF-463	9	OGUGL	1/4" Headless Set Screw Wrench	XD1W	Not Shown	OHIBQ	Vibrator Box Stud Washer
RF-464	9	OGUHS	1/4" Square Head Set Screw Wrench	XD2E	Not Shown	OHIBU	Vibrator Box Flat Spring (Long)
RF-465	9	OGUJM	1/2"-1 1/2" Open End Wrench	XD2RS	Not Shown	OHCAF	Vibrator Box Flat Spring Screw
RF-466	9	OGUKA	1/2"-1 1/2" Open End Wrench	XD2JL	Not Shown	OHICH	Vibrator Box Flat Spring (Short)
RF-467	9	OGULP	Screw Driver	XD4A	1	OHICP	Vibrator Rod
RF-468	9	OGUMY	Oil Can	XD5AA	1	OHCOG	Vibrator Rod
RF-475	8	OGUND	Two-Up Feed Table Center Finger Holder, R. H. (Special)	XD5D	Not Shown	OHICV	Vibrator Rod Stop Pin
RF-476	8	OGUPL	*Two-Up Feed Table Center Finger, R. H. (Special)	XD5D	Not Shown	OHIDR	Vibrator Roll Bushing Stop Pin
RF-477	8	OGURN	Two-Up Feed Table Center Finger Holder, L. H. (Special)	XD8A	Not Shown	OHDEX	Vibrator Rod Worm
RF-479A	8	OGUSH	Two-Up Feed Table Back Stop Bracket (Special)	XD8D	Not Shown	OHDIK	Vibrator Rod Worm Stop Pin
RF-479S	8	OGUTS	Two-Up Feed Table Back Stop Bracket Screw (Special)	XD9	Not Shown	OHDOC	Vibrator Ratchet Steel Ball
RF-480A	8	OGUVE	*Two-Up Feed Table Long Back Stop Finger (Special)	XD10N	1	OHIDT	Vibrator Box Latch Wing Nut
RF-481	8	OGUWI	Two-Up Feed Table Long Back Stop Finger Bracket (Special)	XD18S	Not Shown	OHIFA	Vibrator Box Latch Screw
RF-481S	Not Shown	OGUXA	Two-Up Feed Table Long Back Stop Finger Bracket Screw (Special)	XD19S	Not Shown	OHICB	Vibrator Box Wing Nut Screw
				XD11A	Not Shown	OHIDL	Vibrator Ratchet Collar
				XD11P	Not Shown	OHIFT	Vibrator Ratchet Collar Pin
				XD1X1A	1	OHIEG	Vibrator Box, Left
				XD1X1S	1	OHIEJ	Vibrator Box, Stud
				XD1X2	1	OHIEU	Vibrator Box, Right
				XD1X10A	1	OHIEL	Vibrator Box Latch

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts. IMPORTANT—Be sure to mention size of press for which parts are being ordered.

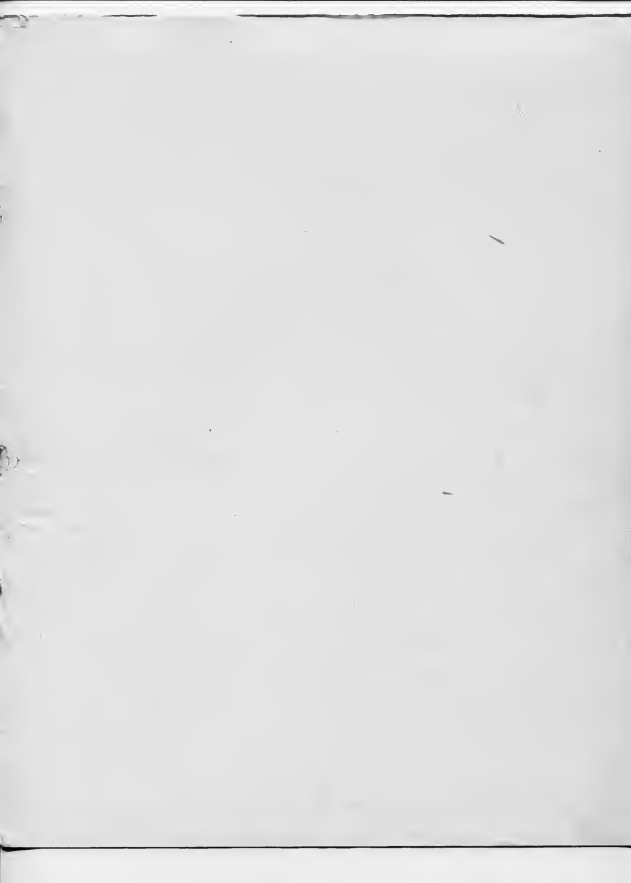

PRINTED IN U.S.A.